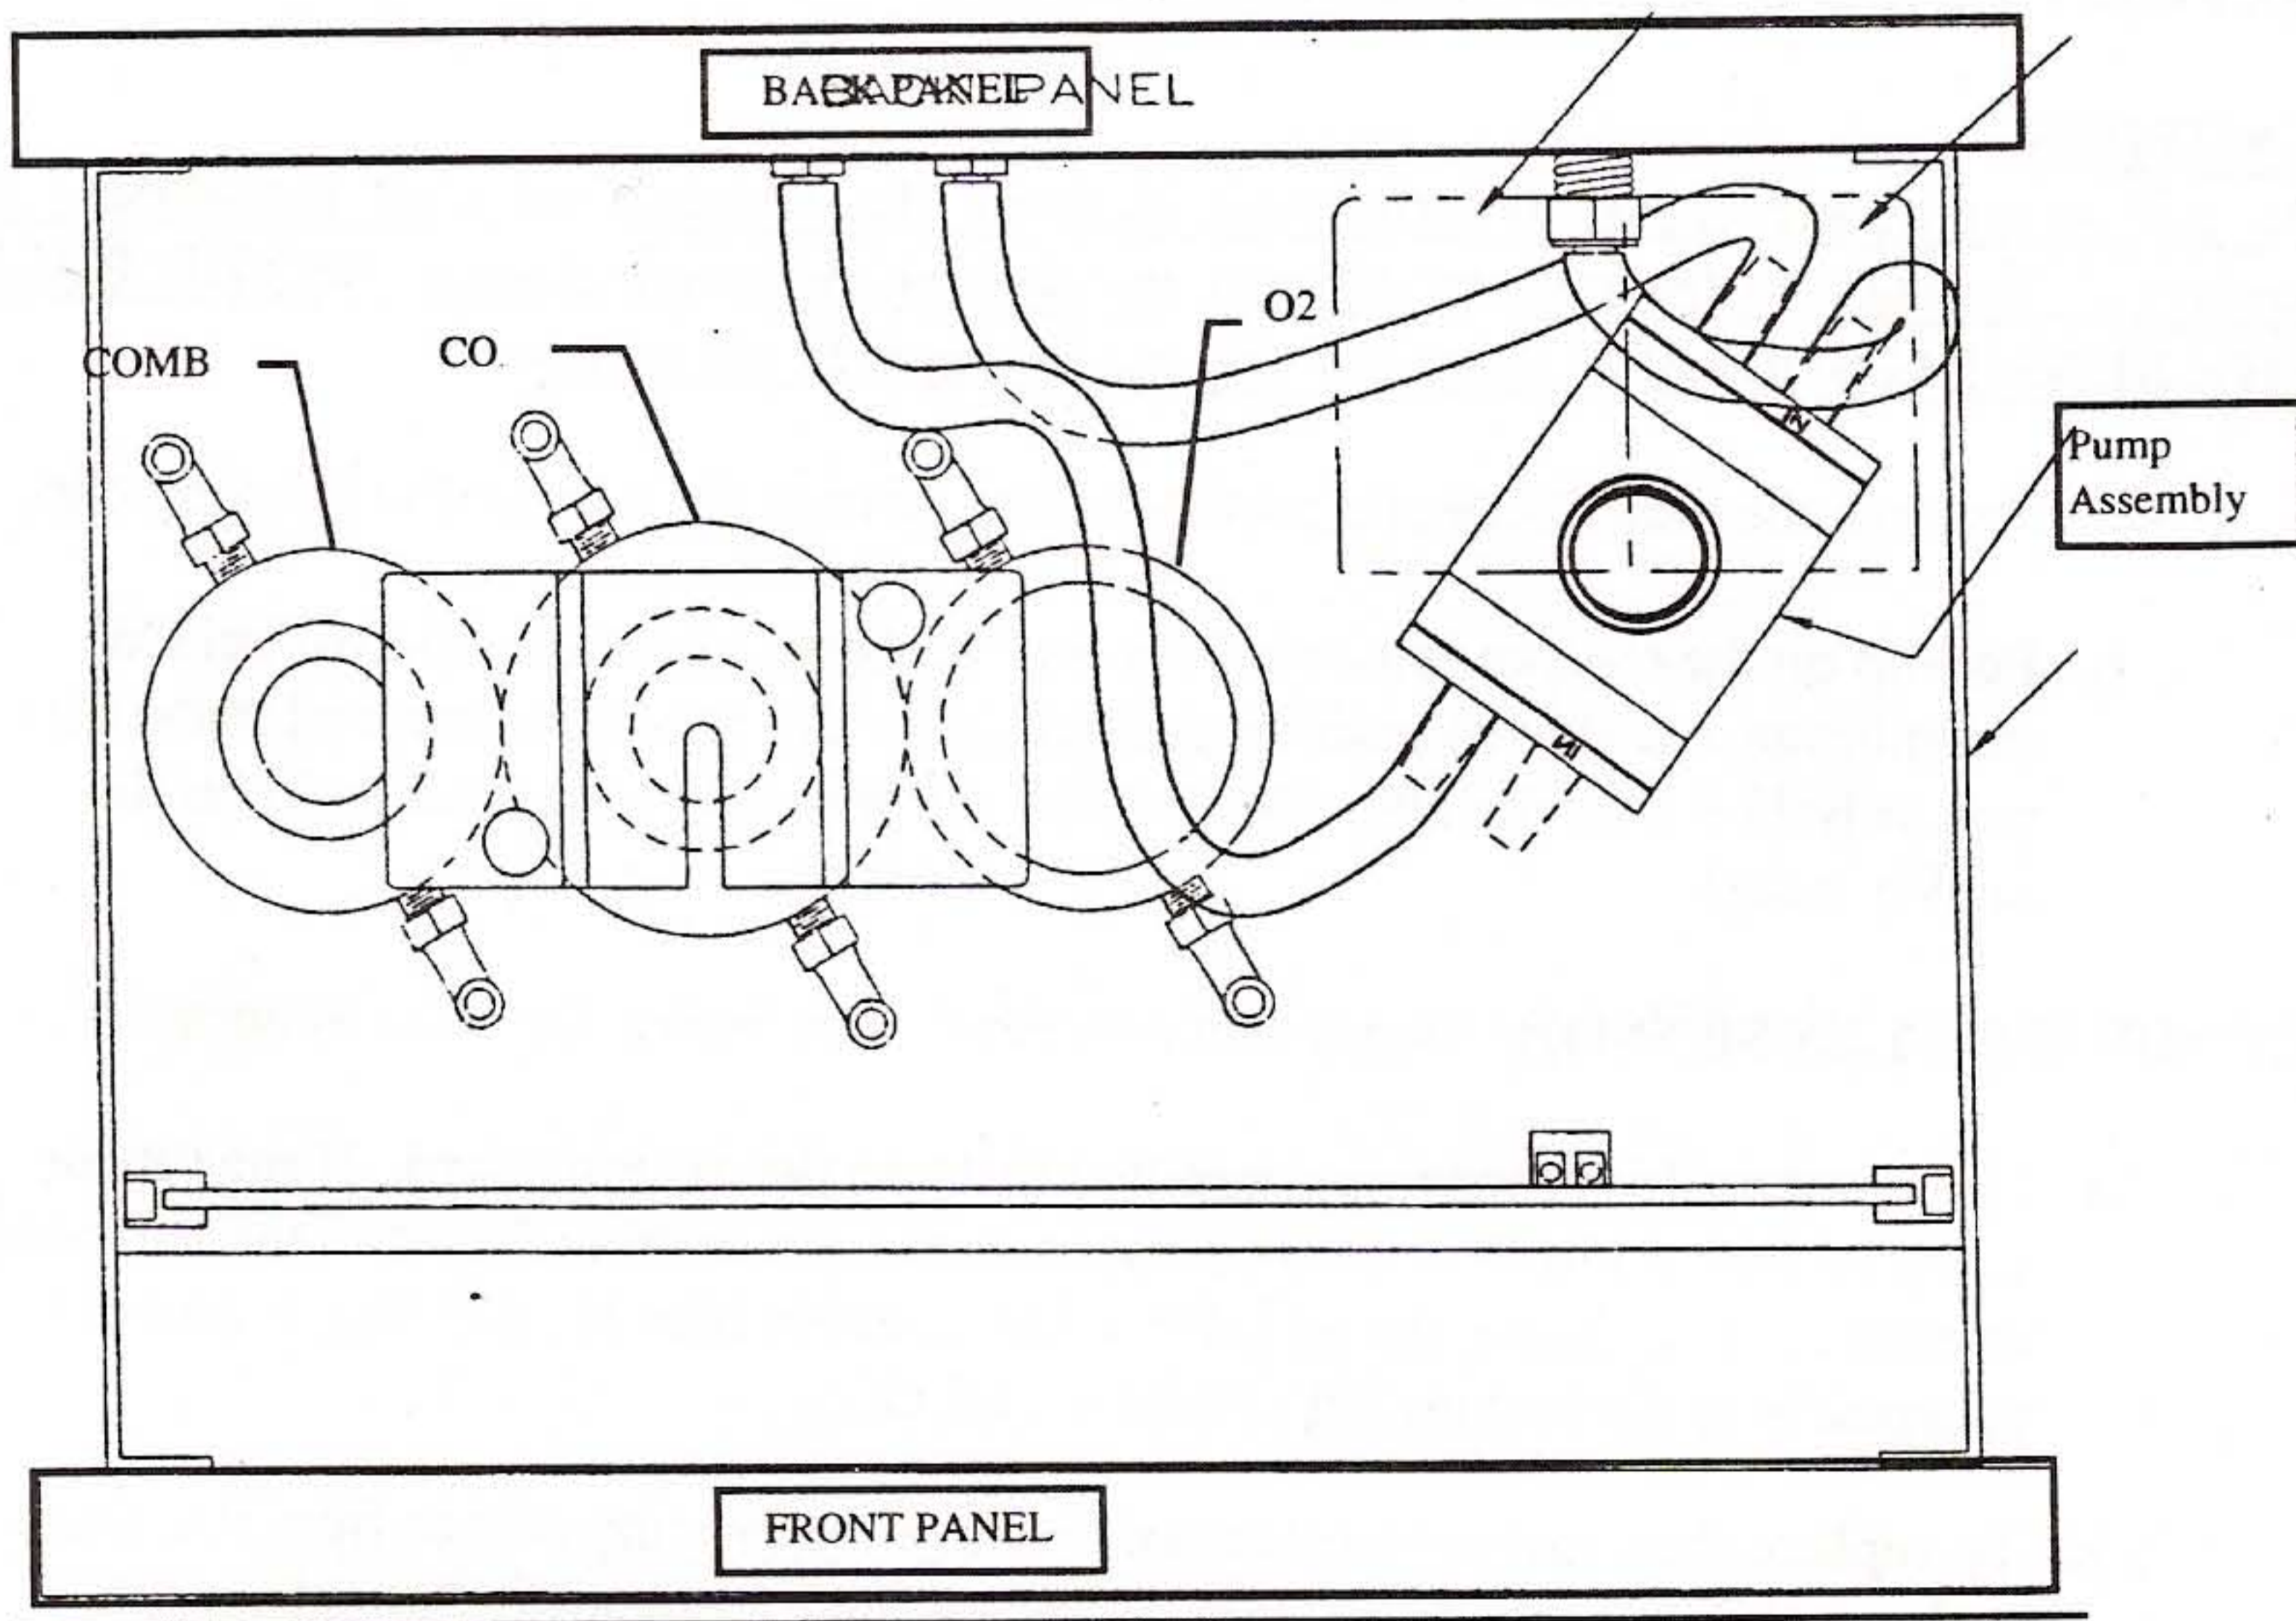


### SENSOR INSTALLATION AND REPLACEMENT

To install (or replace) the sensors in the MAX 5, proceed as follows:

1. Unplug the charging cord from the analyzer and turn power switch off. Then loosen the two screws (no more than 3/4") indicated on the back panel of the MAX 5.
2. Remove the upper screws on each of the MAX 5 case and lift the cover off the unit.
3. Remove the finger nuts and bracket holding the sensors in place.

**NOTE:** *As you face the unit (keyboard toward you) the combustibles sensor is on the far left, the CO sensor is in the center and the oxygen sensor is on the right as shown in Figure 4.*



**Figure 4. Location of Sensors (Top View)**