

TELEDYNE **ANALYTICAL INSTRUMENTS**



Model AN300 **Portable** **Nitrogen Analyzer**

Teledyne's hand-held AN300 Portable Nitrogen Analyzer is designed for use in the measurement of nitrogen for the automotive industry, specifically commercial tire retailers.

Constructed of high impact resistant materials, the AN300 provides unparalleled performance under the harshest conditions. The unit is powered by 3 AA batteries which should last for at least 2000 hours of use.

FEATURES

- Battery charge indicator
- One key operation (On / Off / Cal)
- Auto diagnostics with error codes to simplify troubleshooting
- Teledyne's own N-33 sensor
- Sensor interconnection cable
- Runs on 3 AA batteries
- 1/4" NPT connection for use with customer supplied chuck
- Up to 50 psig sample pressure


THE SENSOR

Lightweight and easy to use, the AN300 incorporates Teledyne's own N-33 Micro-fuel Cell sensor for quick and accurate analysis of oxygen. This maintenance-free, sealed, electrochemical cell is specific to oxygen, insensitive to flow rate, and has a 90% response in less than 10 seconds. At the end of its life, the cell is discarded and replaced like a flashlight battery.

BENEFITS OF NITROGEN

- Nitrogen tire inflation has been explored by Formula One, NASCAR, and Tour de France cyclists among other organizations.
- Nitrogen inflated tires lose pressure at one-quarter the rate of tires inflated with plain air. Nitrogen molecules are heavier than air, and are retained within the tire's structure for longer. Therefore, nitrogen provides safer driving conditions.
- Air contains moisture and perhaps oil due to the lubricant on the tire inflation device. These elements contribute to wheel rim rust and rubber eating oxidation.
- Air retains heat while nitrogen disperses it so tires can run as much as 20% cooler.

Overall nitrogen increases tire life, which has become vital to the transport industry's maximizing of retread life.

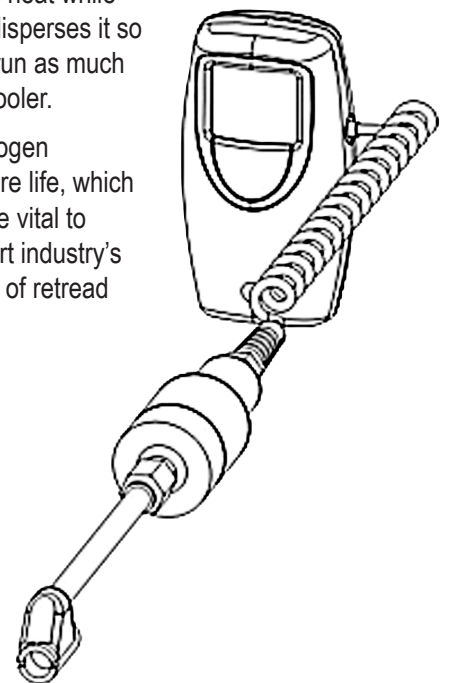


Built for Reliability and Performance

AN300 Portable Nitrogen Analyzer

SPECIFICATIONS

Range:	0-100 % nitrogen (100% O2%)	Weight:	1 lb. (420 gr.)
Response time:	90% of final value in less than 10 seconds.	Dimensions:	5.5" H x 3.5" W x 3" D (139.7 x 88.9 x 76.2 mm)
Battery life:	Approximately 2000 hours. (12,000 10 Minute ON/OFF cycles)	RFI hardened:	Yes
Auto OFF time delay:	10 minutes	Warranty:	12 months covers defects in material and workmanship; excludes sensor life
Operating temperature:	0-40 °C	Approvals:	CE mark
Power:	3 AA alkaline batteries		
Sensor type:	N-33		
Sensor life:	24 months in air.		
Sensor cable:	Extends to 10 feet (3m)		

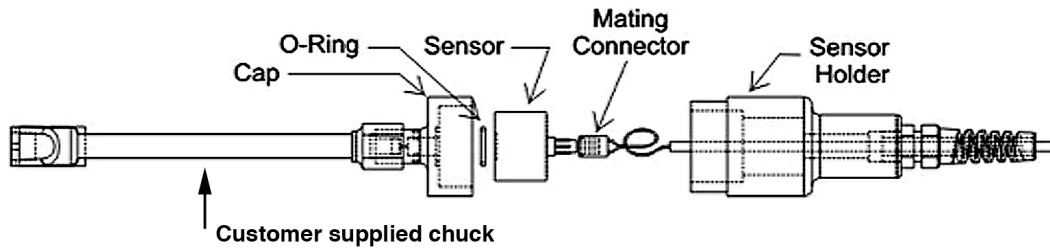

TELEDYNE **ANALYTICAL INSTRUMENTS**

A Teledyne Technologies Company

16830 Chestnut Street
City of Industry, California 91748, USA

TEL: 626-934-1500 or 888-789-8168
FAX: 626-934-1651 EMAIL: ask_tai@teledyne.com

www.teledyne-ai.com

Warranty

Instrument is warranted for 1 year against defects in material or workmanship

NOTE: Specifications and features will vary with application. The above are established and validated during design, but are not to be construed as test criteria for every product. All specifications and features are subject to change without notice.

