

TELEDYNE ANALYTICAL INSTRUMENTS

Automotive oxygen sensors

Teledyne has a long and successful history in the development and supply of oxygen sensors for automotive emission testing equipment.

The “R” series sensors are used by most automotive emission equipment manufacturers worldwide. We are striving to improve our sensors through aggressive research and development, assuring the highest quality products offered by any supplier of oxygen analyzers.

Resistance to CO₂

Recent major breakthroughs by Teledyne include the utilization of a special plating on the cathode resulting in a 200 times greater resistance to the effects of CO₂. This increases the useful life of the sensor when used in exhaust emission testing.

Because of this innovation, the field failure rate for Teledyne sensors has diminished to less than 1% over the last year for hundreds of thousands of sensors shipped annually. From our clients’ perspective, there are far fewer field service calls due to the oxygen sensor not functioning properly.

Teledyne is committed to maintaining competitive pricing to assure our clients benefit from the most advanced design in oxygen sensors. To demonstrate the quality of Teledyne’s oxygen sensors, we have certification from the Bureau of Automotive Repairs for BAR97, BAR90, and the PTB as a stand alone component.



Certified: BAR97, BAR90, PTB

The response of the sensors meets or exceeds the required time response, and the quality and reliability of the sensors are beyond standard requirements. In addition, Teledyne is an ISO-9001 certified quality management system company, dedicated to quality, performance and customer satisfaction.

Features

- PTB, BAR97, and BAR90 product approval
- Accurate measurement performance
- Able to reach 0.01% (1/10 industry requirement)
- Long life in the field
- Fast response time
- Consistent linear response
- Stable zero
- Choice of connector and thread options
- Custom labels for corporate identification


Automotive Oxygen Sensors

SPECIFICATIONS


Sensor models:	R17A, R21A & R22A
Output range:	7 - 13 mV in air at 25° C, sea level (standard); other ranges optional
Range:	0 to 100% O ₂
Resolution:	Better than 0.1% O ₂
Linearity:	±1% of full scale at constant temperature and pressure
Expected life:	36 months at 20.9% oxygen, 25° C, 50% RH
Response time:	30 seconds or less 20.9% O ₂ to 0.1% O ₂ : (actual response of sensor is < 6 seconds 0 to 90% O ₂)
Humidity:	0 to 99% RH, non-condensing
Operating temperature range:	0° to 50° C
Temperature compensation:	±5% of reading over the operating range (at thermal equilibrium)

Cross interference:	Less than 0.1% O ₂ response to: 15% CO ₂ , balance N ₂ 7% CO, balance N ₂ 3000 ppm NO, balance N ₂ 3000 ppm HC (Hexane), balance N ₂
Connectors:	3 Pin Molex (R21A & R22A) Switchcraft mini phone jack (R17A)
Approvals:	PTB, BAR97, BAR90, CE

R21A & R22A

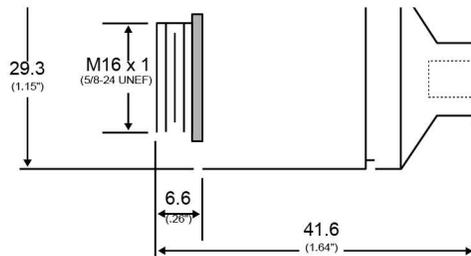

R17A

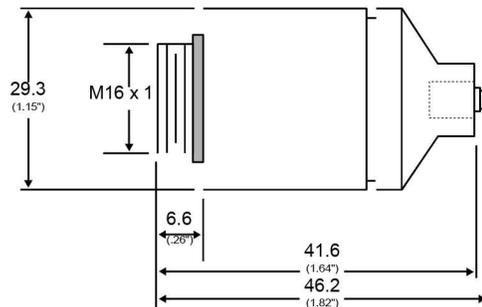

TELEDYNE ANALYTICAL INSTRUMENTS

A Teledyne Technologies Company
16830 Chestnut Street
City of Industry, California 91748, USA

TEL: 626-934-1500 or 888-789-8168
FAX: 626-934-1651 EMAIL: ask_tai@teledyne.com
www.teledyne-ai.com

Warranty

Instrument is warranted for 1 year from date of shipment against defects in material or workmanship.

NOTE: Specifications and features will vary with application. The above are established and validated during design, but are not to be construed as test criteria for every product. All specifications and features are subject to change without notice.